

## Canon Powershot A70 Digital Camera



Table of contents	page 1
List of supplied accessories	page 2
Taking photos	page 3
Zooming	page 3
Installing and uninstalling a CF card	page 4
Changing the batteries	page 4
Viewing taken photos on the camera's LCD screen	page 4
Uploading photos to a computer	page 5
Viewing the photos with a TV	page 6
Deleting photos	page 6

**List of supplied accessories**



USB cable (for connecting to a computer)






Video cable (for connecting to a TV)



Battery charger and four rechargeable  
batteries
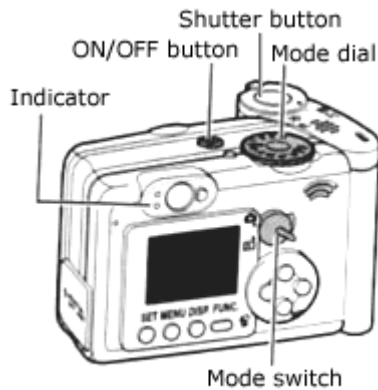
## Taking photos



1. Hold the ON/OFF button down until the indicator next to the viewfinder starts blinking green.
2. Set the Mode switch to  (shooting). If there is a message "No memory card" on the LCD screen, follow the instructions in the part *Installing and uninstalling a CF card* of this document.
3. Turn the mode dial to , as showed on the following image.




4. Focus: Aim the camera at the subject, lightly press and hold the shutter button halfway down. The camera beeps twice when the focus is set.
5. Shoot: Press the shutter button all the way.

---

## Zooming

The zoom lever is located on the top of the camera around the shutter button. To keep the quality of the photo good, zoom only up to 3x.

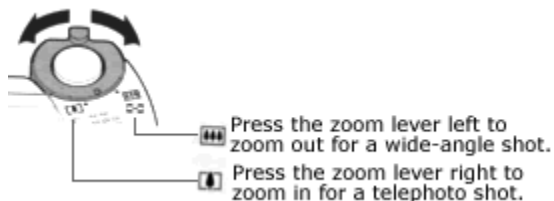

## Installing and uninstalling a CF card

To install and uninstall a Compact Flash card:


1. Make sure the camera is turned off.
2. Slide the CF card slot cover in the direction of the arrow, and open it. (A)
3. Insert the CF card with the label facing out. (B)
4. To uninstall the CF card, press the CF card eject button. (C)



---

## Changing the batteries


The camera is powered by four AA batteries. Provided is a battery charger and four rechargeable batteries. The battery compartment can be accessed from the bottom of the camera. Insert the batteries exactly how it's shown on the following image.

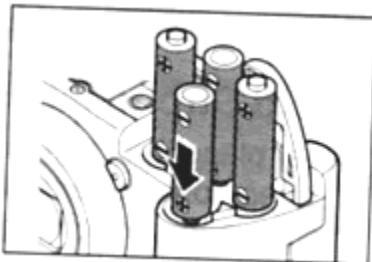


---

## Viewing taken photos on the camera's LCD screen

To view the photos on the camera's LCD screen:

1. Turn the mode switch to  (viewing) mode.
2. View the images.

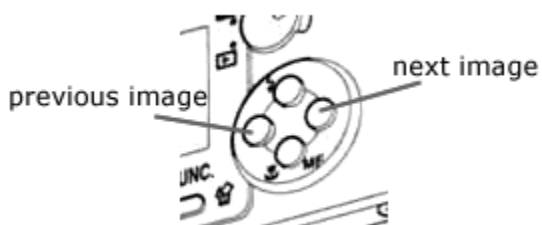



## Uploading photos to a computer

To connect the camera to a computer or a printer, you need a USB cable.

To upload the photos to a computer:

1. Turn off the camera.
2. Connect the computer and the camera with the USB cable.

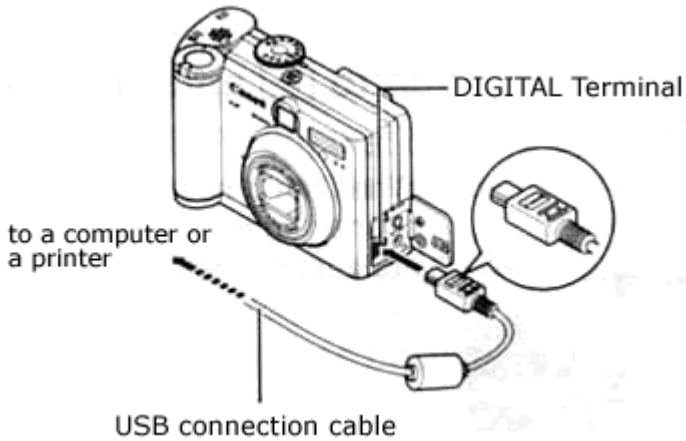


3. Turn on the camera
4. Turn the mode switch to  (viewing) mode.
5. Follow the instructions in the computer. It will help you to print, save and/or manage your photos.


## Viewing the photos with a TV


To connect the camera to a computer or a printer, you need a USB cable.

To view the photos with a TV:

1. Turn off the camera
2. Connect the camera and the TV using an AV cable.

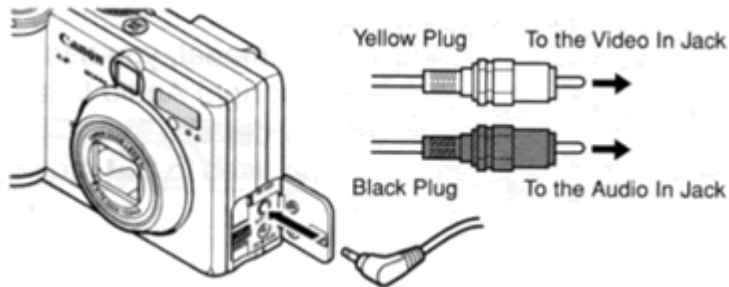


3. Turn on the camera.
4. Turn the mode switch to  (viewing) mode.
5. View the images.

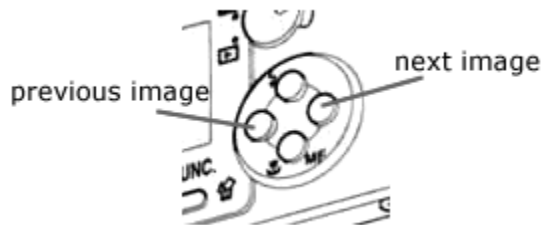

---

## Deleting photos

To delete photos:

1. Find the photo you want to delete (as described on Viewing taken photos on the camera's LCD screen)
2. Press on the  (delete) button below the screen.
3. Press SET button to confirm your decision.

The full manual of the Canon Powershot A70 Digital Camera can be found on the LIS Media Services' equipment page at [web address here].

Copyright © 2005 LIS