

Panasonic Talkman IV Tape Recorder

For Books on Tape use



To play back a commercial stereo or mono recording, set the Mode Switch (on top of the rectangular housing on the back of the recorder) to Stereo (ST).

To play back talking books, set the Mode Switch to '1-2' or '3-4' depending on what tracks the desired recording is located on.

To play:

- ➔ Lift open tape compartment door and insert tape.
- ➔ Press PLAY.
- ➔ To stop the playback, press STOP.
- ➔ To eject the tape, simply lift open the tape compartment and take out the tape.

You can change the speed of playback with the Variable Speed Thumb Wheel. It is located on top of the rectangular housing on the back of the recorder.